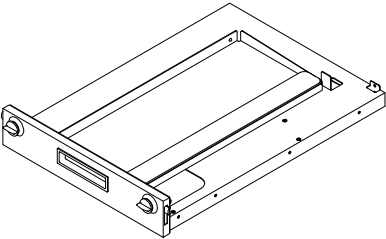
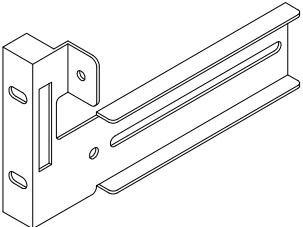
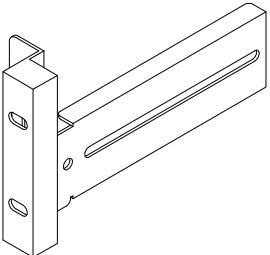
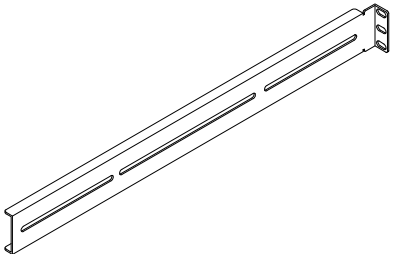


## Series 2 Keyboard Rack Kit

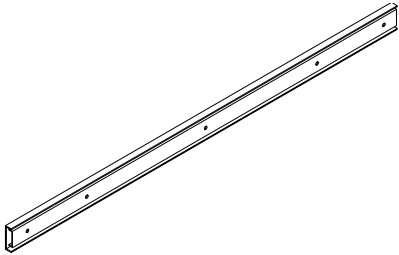
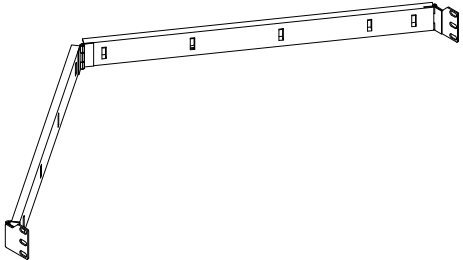
Installation Instructions for the KEY-R19-SRS2  
in a 4-post 19-inch EIA Rack Enclosures

KEY-R19-SRS2

### Kit Contents

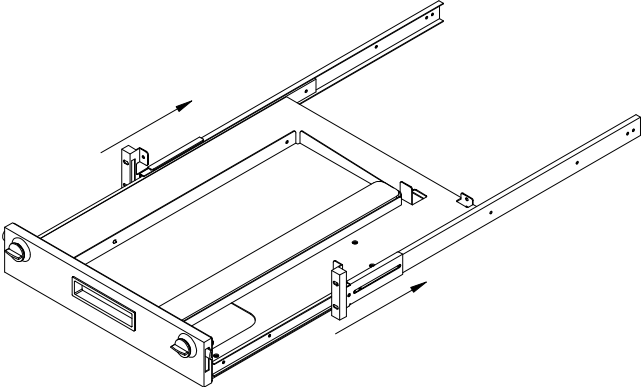
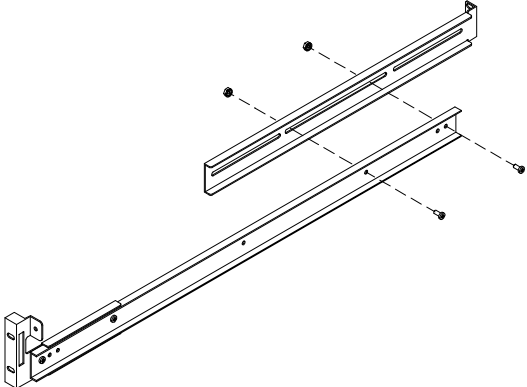
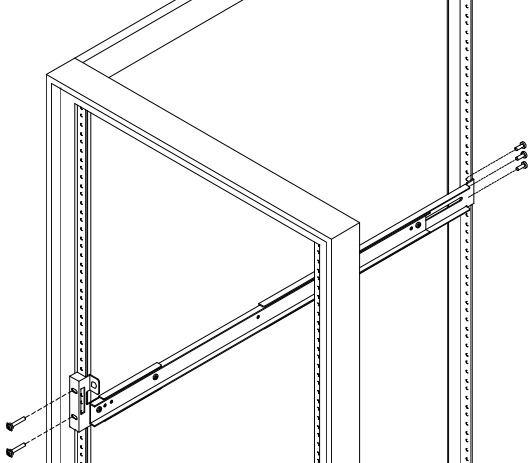
List #	Part #	Part Name	Quantity	Detail
1	SH94000	Keyboard Tray Assembly	1	
2	SH94016	Left Front Bracket	1	
3	SH94015	Right Front Bracket	1	
4	SH94014	Rear Bracket	2	

## Series 2 Keyboard Rack Kit Installation Instructions

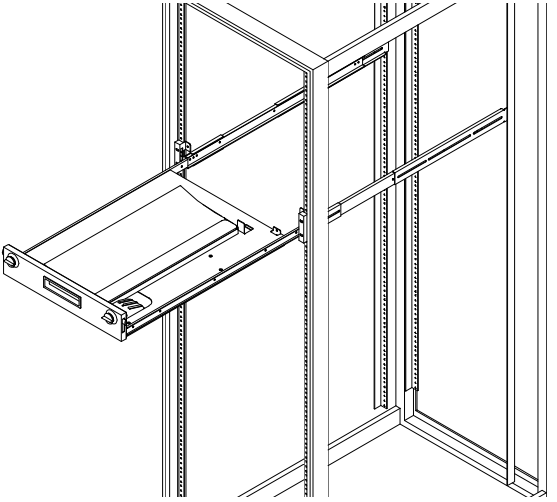
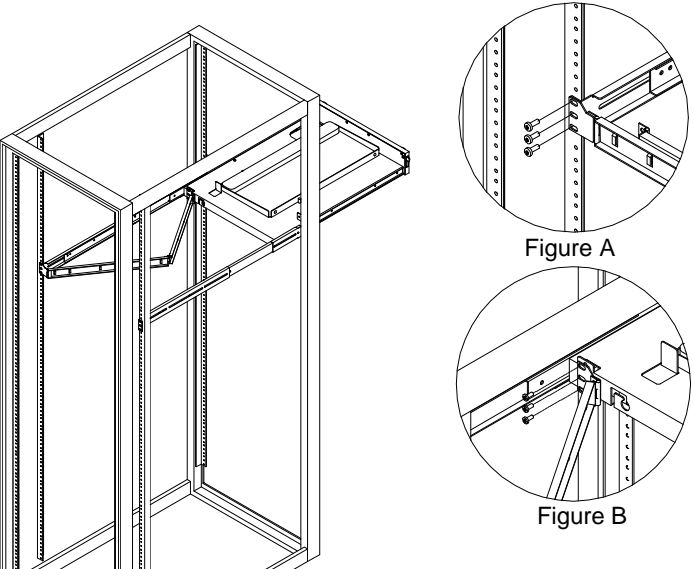
List #	Part #	Part Name	Quantity	Detail
5	C204A-26-LS	Bearing Slides	2	
6	SH94017	Cable Management	1	
7	SH94018	Hardware Packet <ul style="list-style-type: none"> <li>• 10-3 x 1/2" Pan head (12)</li> <li>• 10-32 x 1 1/8" Screw (5)</li> <li>• 8-32 Kep Nuts (5)</li> <li>• 8-32 x 3/8" Pan Head (5)</li> </ul>	1	

## Series 2 Keyboard Rack Kit Installation Instructions

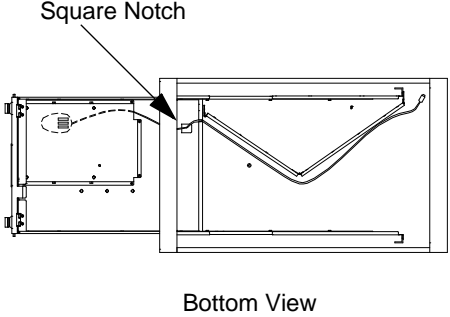
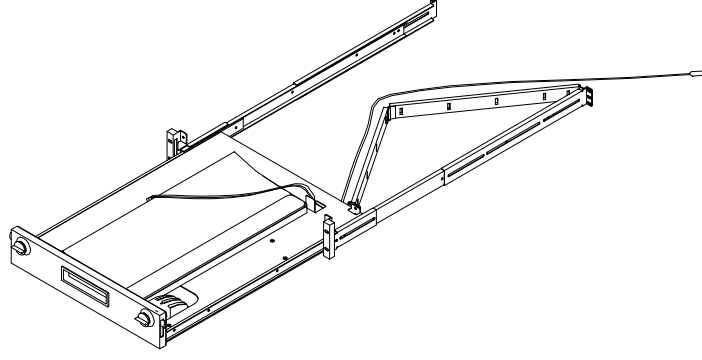
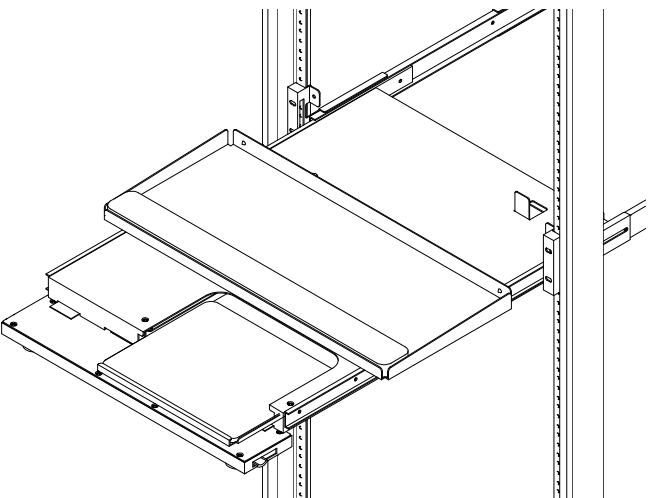
### Installation Instructions

Step	Detail
<p>1. Remove the slide assemblies from the keyboard tray. Pull the left slide assembly as shown until it detaches from the keyboard tray. Repeat for right side.</p> <p><b>Note:</b> Must push in lock tab to release slide member from keyboard tray slide.</p>	
<p>2. Measure the distance from the front rack rail to the rear rack rail.</p> <p>Distance = _____</p> <p>3. Attach the rear bracket to the slide assembly using (2) #8-32 x 3/8" pan head screws and (2) Kep nuts at the measured distance. Make sure that the screws heads are on the inside of the slide rails and the nuts are on the outside.</p> <p>4. Repeat for right side.</p>	
<p>5. Secure the left slide assembly into the rack using (3) #10-32 x 1/2" pan head screws at the rear and (2) #10-32 x 1 1/8" chrome screws at the front.</p> <p>6. Repeat for the right side.</p>	

## Series 2 Keyboard Rack Kit Installation Instructions

Step	Detail
<p>7. To install keyboard tray, fit the rails of the keyboard tray assembly into the grooves on the side rails</p> <p>8. Slide the keyboard tray assembly all the way to the back of the slide rails. The keyboard may not slide smoothly or easily when you push it into the rack enclosure for the first time. Be sure to push it all the way to the back to fully engage the ball bearing slides.</p> <p>9. Push keyboard tray into the rack and test that the tray slides in and out smoothly. If it binds or feels rough, some adjustments may be needed to the slide assemblies.</p>	
<p>10. Attach the cable management to the rack by unscrewing the (3) #10-32 x 1/2" pan head screws from the right rear slide assembly.</p> <p>11. Place the cable management bracket over the rear slide bracket and secure using (3) #10-32 x 1/2" screws. See Figure A.</p> <p>12. Attach the cable management to the keyboard tray by using (3) #8-32 x 3/8" pan head screws. See Figure B.</p> <p>13. Slide the keyboard tray in and out of the rack to ensure there is no binding.</p>	

## Series 2 Keyboard Rack Kit Installation Instructions

Step	Detail
<p><b>Installing Keyboard and Mouse</b></p> <ol style="list-style-type: none"><li>14. Fully extend the shelf out of the rack enclosure, then rotate the keyboard pan to its working position.</li><li>15. Disconnect the mouse cable from the keyboard.</li><li>16. Pull the mouse tray out until it is fully extended.</li><li>17. Place the mouse on top of the mouse pad. Thread the mouse cable through the back of the mouse tray and up through the square notch at the back of the keyboard tray.</li><li>18. Place the keyboard in the keyboard tray.</li><li>19. Plug the mouse cable into the keyboard.</li><li>20. Run the keyboard cable down through the square notch in the top of the shelf and through the hole in the back of the shelf.</li><li>21. Use the supplied zip ties to secure the cabling along the cable management system.</li></ol>	 <p>Square Notch</p> <p>Bottom View</p> 
<p><b>Using Keyboard Tray and Mouse</b></p> <ol style="list-style-type: none"><li>22. Turn locks on the door and lower the front door.</li><li>23. Use the handle on the front of the shelf to pull the shelf outward until fully extended from the rack enclosure.</li><li>24. Turn the keyboard tray 1/4 clockwise.</li><li>25. Pull the mouse tray out until it is fully extended</li><li>26. Push the shelf back into the rack enclosure until the keyboard tray rests against the front vertical mounting rails of the rack enclosure</li><li>27. When you are finished using the keyboard, reverse Step 22 through Step 26.</li></ol>	

## Warranty

LIMITED WARRANTY AND WARRANTY DISCLAIMER - Seller warrants that the System will be free from defects in materials and workmanship for a period of one (1) year from date of delivery to customer premises. Seller's sole liability and Customer's sole and exclusive remedy for any breach of this warranty is, at Seller's option and expense, to repair or replace any defective System that is returned to it by Customer. Seller will have no obligation under this section to the extent any defect in the System is caused by or is attributable to negligence, accident, misuse, abuse, use of the System than in accordance with Seller's documentation or user manual, modifications, alterations or repairs to the System made by a party other than Seller, or actions of third parties or like events outside Seller's reasonable control. EXCEPT AS EXPRESSLY SET FORTH IN THIS SECTION, TO THE EXTENT PERMITTED BY APPLICABLE LAW, SELLER DISCLAIMS ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUALITY, OR NONINFRINGEMENT, AND ANY WARRANTIES ARISING FROM COURSE OF DEALING OR USAGE OF TRADE.

LIMITATIONS OF LIABILITY - IN NO EVENT WILL SELLER BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS OR REVENUE, LOSS OF USE, LOST BUSINESS OPPORTUNITIES OR LOSS OF GOODWILL), OR FOR THE COSTS OF PROCURING SUBSTITUTE PRODUCTS, ARISING OUT OF OR IN CONNECTION WITH THESE TERMS OF SALE OR THE USE OF THE SYSTEM, WHETHER SUCH LIABILITY ARISES FROM ANY CLAIM BASED UPON CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, WHETHER OR NOT SELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. IN NO EVENT WILL SELLER'S TOTAL CUMULATIVE LIABILITY, FROM ALL CAUSES OF ACTION AND ALL THEORIES OF LIABILITY, EXCEED THE TOTAL AMOUNTS ACTUALLY PAID TO SELLER BY CUSTOMER UNDER THE ORDER THAT GIVES RISE TO ANY LIABILITY HEREUNDER.